DENTAL LABORATORY Create it NSK www.nsk-dental.com

INDEX

ULTIMATE XL Series	P 03 - 08
VOLVERE i7	P 09 - 10
PRESTO Series	P 11 - 12
Spare Parts	P 13 - 14
Spare Parts	P 13 - 14

ULTIMATE XL series Brushless Micromotor

Great Hands Need Great Tools

The superior creative engine from NSK, as preferred by dental technicians worldwide. Letting skilled hands turn technique into form.



Micromotor



Micromotor & cord

Torque	UMXL-T2M	Y141441
Туре	MODEL	ORDER CODE

- Speed: 1,000-50,000 min⁻¹ Max. torque: 8.7 Ncm
 Dimensions: L 151 x ø29 mm
 Weight: 215 g (cord not included) Cord length: 2 m



Micromotor & cord

Compact	UMXL-C2M	Y141445
Туре	MODEL	ORDER CODE



Micromotor & cord

Туре	MODEL	ORDERCODE
E-type	UMXL-EM 2 M	E342002

- Speed : 1,000-50,000 min⁻¹ Max. torque : 6.0 Ncm
- Dimensions: L 118 x ø27 mm
 Weight: 129 g (cord not included) Cord length: 2 m

ULTIMATE XL series Brushless Micromotor

Powerful and Comfortable

The ULTIMATE XL Series offers a choice of four control units, according to space and user requirements. All functions are controlled by NSK's microcomputer which maintains smooth starting and stopping ensuring excellence in overall operability.



ULTIMATE XL



Bench Top System BRUSHLESS

Features

- Speed of 1.000-50.000 min⁻¹
- Digital speed display
- Maintenance mode setting
- Auto cruise function
- Error code display function

*Not applicable to connect with an air turbine handpiece

Туре	MODEL	ORDER CODE
Torque	UMXL-GT	Y141471
Compact	UMXL-GC	Y141472



• Control unit • Micromotor handpiece • Foot control • Handpiece stand

Specifications

- Power supply : AC 230 V 50/60 Hz
- Weight: 2.8 kg
- Dimensions : W 167 x D 247 x H 77 mm

ULTIMATE XL-D



Bench Top Tower System BRUSHLESS

Features

- Speed of 1,000-50,000 min⁻¹
- Digital speed display
- Maintenance mode setting
- Auto cruise function
- Error code display function
- Available to connect with an air turbine adaptor

Туре	MODEL	ORDER CODE
Torque	UMXL-DT	Y141504
Compact	UMXL-DC	Y141505

Contents
• Control unit • Micromotor handpiece • Foot control • Handpiece stand

Specifications

- Power supply : AC 230 V 50/60 Hz Weight : 3.3 kg
- Dimensions : W 81 x D 270 x H 230 mm



ULTIMATE XL-D can also operate air turbine handpieces by simply attaching the optional air turbine adaptor.



the entire speed range.

180° vector control system. Powerful and stable torque across

Low noise, low vibration

Minimal vibration, and noise from hermetically shielded micromotor unit. Approximately 30% increased chuck strength enables you to work on a wider variety of materials.

ULTIMATE XL-K



Knee Control System BRUSHLESS

Features

- Speed of 1,000-50,000 min-1
- Digital speed display
- Maintenance mode setting
- Auto cruise function
- Error code display function
- Available to connect with an air turbine adaptor


Туре	MODEL	ORDER CODE
Torque	UMXL-KT	Y141495
Compact	UMXL-KC	Y141496

Contents
• Control unit • Micromotor handpiece • Handpiece stand

Specifications

- Power supply: AC 230 V 50/60 Hz
 Weight: 3.2 kg
 Dimensions: W 90 x D 270 x H 230 mm







ULTIMATE XL-F



Floor Type Foot Control System BRUSHLESS

Features

- Speed of 1,000-40,000 min-1
- Auto cruise function
- Available to connect with an air turbine adaptor

*Speed and all other function are controlled via foot control. For safety, maximum speed preset to 40,000 min

Туре	MODEL	ORDER CODE
Torque	UMXL-FT	Y141513
Compact	UMXL-FC	Y141514

Contents
• Control unit • Micromotor handpiece • Handpiece stand

Specifications

- Power supply: AC 230 V 50/60 Hz
 Weight: 3.8 kg
- Dimensions : W 230 x D 292 x H 113 mm




ULTIMATE XL-F can also operate air turbine handpieces by simply attaching the optional air turbine adaptor.

Turbine Adaptor TA50 FOR ULTIMATE XL-D, XL-K and XL-F

TA50 air turbine adaptor allows you to quickly switch power source between air turbine handpiece and electric micromotor. Both handpieces are equally controllable with a single foot control or knee control.



MODEL	ORDER CODE
TA50	U375

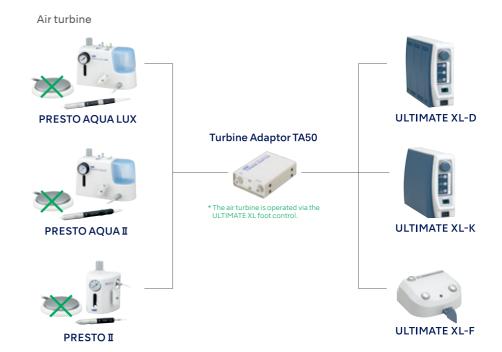

07 80

VOLVERE i7 Coreless Micromotor

Compact & Smart

A User-Friendly Micromotor for Any Dental Laboratory

The VOLVERE i7 is another advance in NSK's quest to provide dental technicians access to its globally renowned dental laboratory engines. The stylish VOLVERE i7 delivers a compact, advanced design, all essential features and excellent value for money.

Light and compact to fit into the smallest space

The unit is just 69 mm wide and weighs only 930 g. It can safely be placed on workbench shelves to save space on the worktop.

Microcomputer control

Knowledge gained from many years of experience and NSK's cutting edge dental laboratory technologies are incorporated into a high performance microcomputer with its CPU. This microcomputer provides excellent control and constantly monitors the motion of the motor to provide smooth starting and stopping. If changing rotation direction while the motor is running, the microcomputer waits and checks that the motor has completely stopped before changing the rotation direction. The motor starts and stops without any jolts and runs extremely smoothly to maximize user comfort.



Standard Micromotor



Ergonomic handpiece



This handpiece incorporates the latest ergonomics, just like all NSK models. The grip is easy to hold and minimises fatigue, enhancing the precision of dental laboratory work.

Special dust proof mechanism

The handpiece has a patented built-in dust-proof system to prevent the ingress of debris into the bearings.

High torque, high efficiency coreless motor



The micromotor in the VOLVERE i7 handpiece has no core and generates less rotary momentum. This contributes to the controllability of the rotation speed and reduces uneven rotation. In addition, this motor has higher power efficiency compared to a conventional motor and can maintain constant speed even at high speeds.

Standard micromotor system

MODEL	ORDER CODE
VOLVERE i7 RM (230 V)	Y1002890

Handpiece stand

E-type micromotor system With handpiece

VOLVERE i7 VR-EB (230 V)	Y1002891
MODEL	ORDER CODE

Contents
• VOLVERE i7 control unit • E-type handpiece • E-type micromotor

E-type micromotor system Without handpiece MODEL ORDER CODE VOLVERE i7 E (230 V) Y1003523

Contents
• VOLVERE i7 control unit • E-type micromotor • Foot control



Specifications

[Control Unit]

Power supply : AC 230 V 50/60 Hz

• Weight: 930 g

[Standard type motor handpiece]
• Speed: 1,000-35,000 min⁻¹

• Max. torque : 4.1 Ncm

• Dimensions : L 145 x ø24.5 mm • Weight: 192 g (without cord)

• Cord length: 1.2 m

[E-type motor handpiece]

• Speed : 1,000-35,000 min-

• Max. torque : 4.1 Ncm

Dimensions: I 109.3 x ø24.5 mm

Weight: 118 g (without cord)

09 10

PRESTO AQUALUX Lube Free Air Turbine Handpiece with LED

Light + Water

Near-daylight LED technology illuminates with pinpoint accuracy. From mist to drops - complete spray control. Light and water combination means precise control across a broad area.

PRESTO AQUA LUX

Lube free air turbine handpiece with LED

Features

- Simple and easy removal of the water bottle
- On-Off function of LED light and water coolant spray
- Capable of running independently with the incorporated water bottle or connected to mains water supply

•	PRESTO AQUA LUX (230 V)	Y1001151
Optic	MODEL	ORDER CODE

- Contents
 PRESTO AQUA LUX control unit PRESTO AQUA LUX handpiece
- Handpiece stand PRESTO AQUA LUX cord AC adaptor



PRESTO AQUA II

Lube free air turbine handpiece with water spray

Features

- Simple and easy removal of the water bottle
- Seamless adjustments of water volume and spray air
- On-off function of water coolant spray
- Capable of running independently with the incorporated water bottle or connected to mains water supply

Optic	MODEL	ORDER CODE
	PRESTO AQUA II	Y150023

- Contents
 PRESTO AQUA II unit PRESTO AQUA handpiece QD-J B3 coupling
- Hose for PRESTO AQUA II Foot control (AFC-40)
 Secondary hose for PRESTO



PRESTO II

Lube free air turbine handpiece

Features

• Lightweight and compact

Optic	MODEL	ORDER CODE
_	PRESTO II	Y150022

- Contents
 PRESTO II unit PRESTO handpiece Handpiece stand Hose for PRESTO • Foot control (AFC-40) • Secondary hose for PRESTO



Spare Parts

ULTIMATE XL / XL-D / XL-K / XL-F

MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE	MODEL PRODUCT	S ORDER CODE
UMXL-G Control unit bench type		Y141468	UMXL-CM 2M Motor compact type with 2 m cord		E356002	Handpiece stand Wrench is not Included	Z095201
UMXL-D Control unit tower type	Q	Y141503	UHRXL-T Attachment torque type		H269	Suspension handpiece cradle for XL	Z083
UMXL-K Control unit knee type		Y141494	UHRXL-C Attachment compact type		H271	Chuck-2.35 A	H203A180A
UMXL-F Control unit floor type	0.0	Y141512	UMXL-EM Motor E-type with 1.2 m cord		E342	Handpiece Holder for XL	Y900770
UMXL-TP Motor handpiece torque type (with 1.2 m cord)		Y141442	Motor cord T (torque type 1.2 m)	Q	E355051	Wrench for locking rotation	M269751
UMXL-C Motor handpiece compact type with 1.2 m cord	ct (Y141444	Motor cord C compact type 1.2 m	Q	E356051	Wrench for adjusting chuck	K015751
UMXL-TM Motor torque type with 1.2 m cord		E355	Motor cord T 2M torque type 2 m	Q	E355055	TA50 Turbine Adaptor for XL-D, XL-K and XL-F	U375
UMXL-CM Motor compact type with 1.2 m cord		E356	Motor cord C 2M compact type 2 m	Q	E356055	Bracket set for XL-D/XL-K	U364090
UMXL-TM 2M Motor torque type with 2 m cord		E355002	FC-64 Foot control for XL / XL-D		Z304	Fuse-T1.6 A (230 V)	D1202216010

VOLVERE i7

MODEL	PRODUCTS	ORDERCODE	MODEL	PRODUCTS	ORDERCODE	MODEL	PRODUCTS	ORDER COD
VOLVERE i7 unit		U1137	VR-EB E-type handpiece		H1062	FC-76 Foot control		Z1082
GX35RM-B & SCD Motor + cord		E1179	Carbon brush For GX35RM-B / GX35EM-B (pack of 2)	ijij	E023011S	Handpiece stand		Z095206
GX35EM-B & SCD E-type motor + cord		E1180	Chuck-2.35 A		H203A180A	Wrench for adjusting chuck	~	K015751
UHR45C Handpiece for GX35RM-B		H203002						

MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE
PRESTO AQUA LUX control unit	?	Z1038A002	PR-AQL03 PRESTO AQUA LUX cartridge	-((6))-	T1002250	AC adaptor PR-AQL		Y1500004
PRA-LUX-HP PRESTO AQUA LUX handpiece		T1002	Handpiece stand		Z095206	PTL O-ring set (pack of 5)	000000	Y900580
PR-AQL Hose Coupling hose	()	Z1050						

PRESTO AQUA II

	(0/11							
MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE
PRESTO AQUA II unit	7	Z308015	Hose for PRESTO AQUA II	\bigcirc	Z308050	PR-AQ03 PRESTO AQUA cartridge	-(4	T816016
PRA-HP PRESTO AQUA handpiece		T816	QD-J B3 Coupling	-	T354051			

PRESTO AOUA LUX / PRESTO AOUA II

MODEL PROD	UCTS ORDER CODE	MODEL	PRODUCTS	ORDERCODE	MODEL	PRODUCTS	ORDERCODE
AFC-40 Foot control	Z127	Water filter	0	U387042	PRA II bottle O-ring set (pack of 2)	00	Y900327
Chuck	T815019	Tube ring (pack of 2)		Y900077	Bracket set		Z308060
Secondary hose for PRESTO 2 m	Z101240	PRA II Bottle set		Z308040	Chuck wrench		C034751
Water filter set (2 m) 2 water supply tube, water filter, water filter case	U387040	PRA II Bottle lid	*	Z308041	Bur-inserting tool		T815030
Water filter with case	Y900069	PRA II Bottle		Z308601			

PRESTOIL								
MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE
PRESTO II unit	97	Z307015	PR-03 PRESTO cartridge	-@#	T815016	LAB spanner wrench		H005751
PR-HP PRESTO handpiece includes 2 m hose		T815	Chuck		T815019	Chuck wrench		C034751
AFC-40 Foot control	-	Z127	Hose for PRESTO 2 m		T815220	Bur-inserting tool		T815030
Handpiece stand		Z010134	Secondary hose for		Z101240			